 


## Troubleshooting and Tips

- Blinger™ is a styling tool. Just like a curling iron or straightener, it takes practice.
- Make sure you are using a thick enough piece of hair for the gems to stick. If you press down to bling and the gem is partially on your hair and partially on the Blinger™ handle, the gem will stick to the handle and not your hair.
- If you miss a gem, don't worry! You haven't wasted one. Simply use your fingers to place the gem where you want it.
- All gems are repositionable. If you need to move a gem, simply hold the gem carefully on the sides with your fingers, gently pull from the hair or accessory and reposition it where desired. It's that easy!
- Do not apply gems to wet hair or wet surfaces as it does not stick properly.
- To remove, easily comb out or peel off when you're done.
- If you have a partially used disc, all you need to do is add it to the Blinger™ (see previous directions for proper loading) and start with your gem to the left of the hole. When you press to bling, the disc will rotate right and will add the gem as desired.

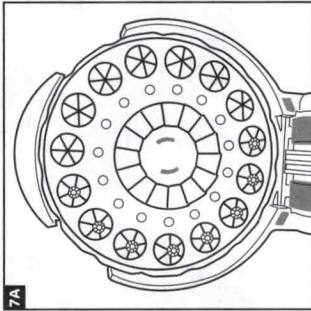

7A

officialblinger.com

Follow & Share  
officialblinger.com  
@OfficialBlinger



Imported by:  
Character Online Ltd,  
Leas Brook Mill, Leas Road,  
Llans, Osbany, Old 5th, UK  
Customer Service  
Tel: 0161 633 9808  
Made in China

www.character-online.co.uk

PROXY A/S  
GOTTERSGADE 12, 1ST FLOOR DK-1123  
COPENHAGEN K, DENMARK  
WWW.PROXYAS.COM

Item: **BLINGER DIAMOND  
COLLECTION - Pink**  
Item Number: 18501  
Age Grader: 6 years plus

### RECYCLING OUR PRODUCTS

All our product and packaging is designed with easy and safe recycling in mind. For information on the National Recycling Strategy and the recycling logo on this pack or product please visit - [www.recycle-here.co.uk](http://www.recycle-here.co.uk) - where you will find the answers to your UK recycling questions.



### WARNING! CHOKING HAZARD.

Not suitable for children under 36 months. Choking hazard (small parts). Please remove all packaging attachments before giving this product to a child. Please use discretion if making purchases for children younger than the age recommended on this package. Product specifications, colour and contents may vary from those illustrated. **IMPORTANT:** Please retain packaging / instructions and purchase details for future reference as they contain important information.

 


# blinger™

Add **BLING** to your everyday life!

Safe and easy to use! Bling hair, fashions and accessories. Easily comb out or peel off when you're done! Works with all hair types and sticks to most materials.

## GLAM STYLING TOOL

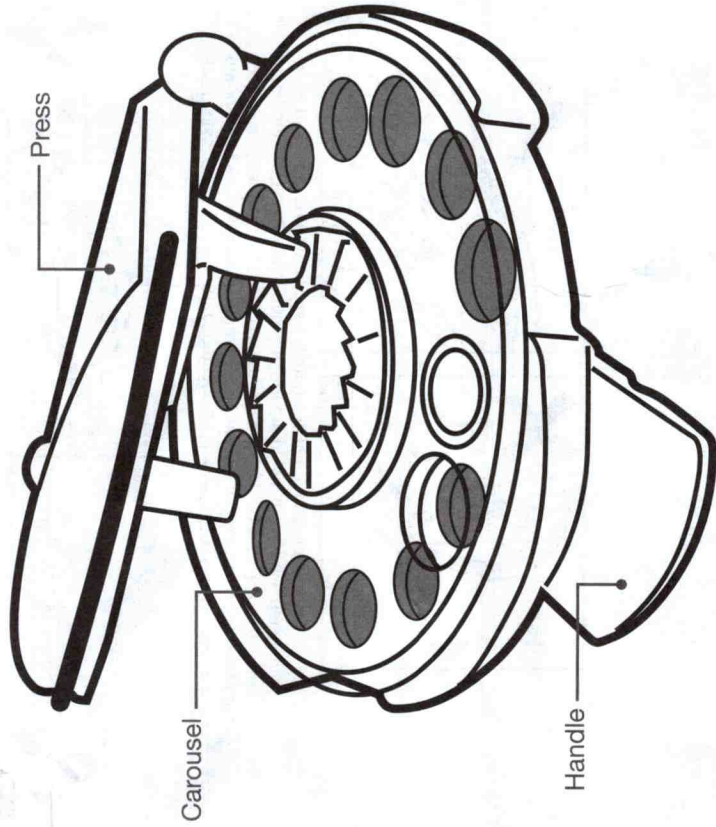

For a list of patents and patent filings related to Hair Blinger® and licensed Blinger™ products visit: [www.officialblinger.com/patents](http://www.officialblinger.com/patents).

**ATTENTION!** Packaging lists, fasteners and tags are not part of the toy and are packaging material only. Please remove before giving to child. Please keep this packaging for future reference as it contains important information. Contents may vary in style, color, shape and decoration from images shown on package or in advertising.

Warning: Not suitable for children under 36 months. Small parts. Choking hazard.

TM & © 2019 MANUFACTURED BY / FABRIQUE PAR WICKED COOL TOYS™ LLC



10 CANAL STREET, SUITE 327, BRISTOL, PA 19007 U.S.A.

MADE IN CHINA  
Questions or comments? [www.wickedcooltoys.com](http://www.wickedcooltoys.com), [info@wickedcooltoys.com](mailto:info@wickedcooltoys.com), or 1-888-519-1332 in North America.


# How to use your Blinger™
  
## LOAD:



1. Release the stretchy band from around the bottom of the Blinger™ handle and place in notch located on the Blinger™ press. This allows the styling tool to be open and fully functional.

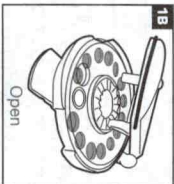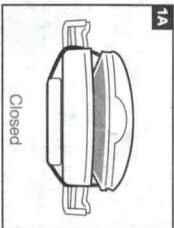

 2. Press down on tab located in the front center of the carousel and pull up on press at the same time.

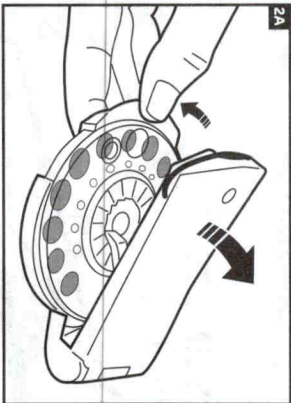


3. Insert disc, one at a time, with gems facing upward onto pegs inside the carousel. When properly lined up, your gems will be located in the center of each hole. Press clear cover down to close, snapping shut. Make sure you press down on clear cover only and not the press. If you push down and close using the press, you risk a gem being used unintentionally.

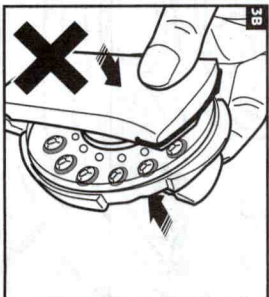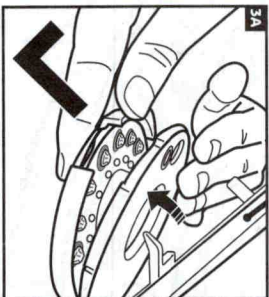


## CLICK:

### Bling 2 Ways!

1. Option 1: Insert a thick strand of hair or a piece of fabric/material in the opening between the bottom of the carousel and top of the handle.


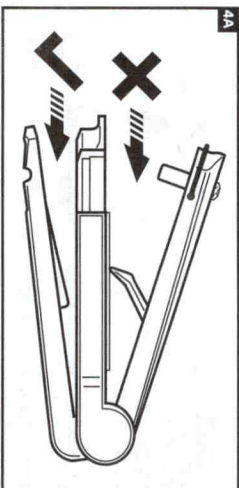


2. Option 2: Pull handle down to open the Blinger™ 180 degrees. Simply place the bottom of the carousel on the area you want to bling and firmly press to add the gem to hair, fashions or accessories. Caution: Opening the Blinger™ more than 180 degrees may cause the plastic to break.

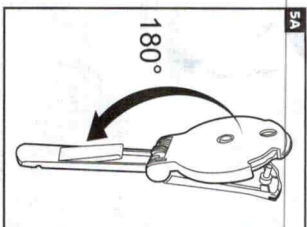

## BLING:

1. Bling away as much as you desire!

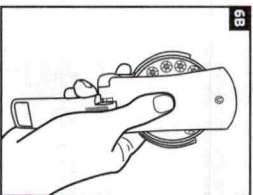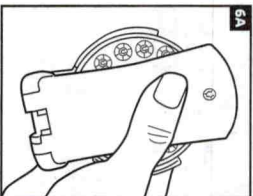

Correct hand positions.