

## INSTRUCTION SHEET

**IMPORTANT: EPILEPSY WARNING!**  
Please read before using this product or allowing children to use it.  
Some people are liable to have an epileptic seizure or loss of consciousness when exposed to flashing lights or certain normal conditions of everyday life. Such persons could risk a seizure while viewing the lights from this product.  
This may occur even if there has been no previous medical problems or experience of epilepsy.  
If you or a member of your family has ever shown epileptic symptoms when exposed to flickering lights, you should consult your doctor before using this or any other similar product.

**BATTERY RECYCLING INFORMATION**

Help the environment by disposing of batteries responsibly. The wheeled bin symbol indicates that batteries must not be disposed of in domestic waste as they contain substances which can be damaging to the environment and health. Please remove exhausted batteries from the product and use designated collection points or recycling facilities when disposing of batteries.




**RECYCLING OUR PRODUCTS**

All our product and packaging is designed with easy and safe recycling in mind. For information on the National Recycling Strategy and the recycling logo on this pack or product please visit [www.Recycle-More.co.uk](http://www.Recycle-More.co.uk) - where you will find the answers to your UK recycling questions.



**WARNING! GLITTER.**

Glitter can be a primary eye irritant.

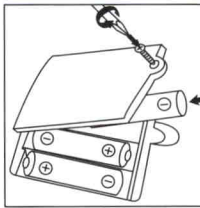

1.5V 3 x AA

**Requires 3 x AA Batteries. (Demonstration Batteries Included)**

- Alkaline batteries recommended.
- Rechargeable batteries must only be recharged under adult supervision.
- Rechargeable batteries must be removed from the toy before recharging.
- Non-rechargeable batteries must not be recharged.
- Different types of batteries, or new and used batteries must not be mixed.
- Only batteries of the same or equivalent type as recommended should be used.
- Batteries should be replaced by an adult.
- Batteries must be inserted following the correct polarity.
- Exhausted batteries should be removed from the product.
- The supply terminals must not be short-circuited.
- Batteries should be removed from the product when not in use.
- Do not dispose of batteries in fire.
- Batteries supplied are for demonstration purposes only and may require replacing within a short period of time.

Item: **BALLERINA DREAMER**  
Item Number: **HUN7229**  
Age Grade: **3 years plus**

**WARNING! CHOKING HAZARD.**

Not suitable for children under 36 months. Choking Hazard (Small Parts). Please remove all packaging attachments before giving this product to a child. Please use discretion if making purchases for children younger than the age recommended on this package. At the end of the useful life of this product do not dispose in normal household waste. Check with your local authority or responsible disposal centre and submit to the collection point for the recovery and recycling of electrical and electronic equipment. Product specifications, colour and contents may vary from those illustrated. **IMPORTANT:** Please retain packaging/ instructions and purchase details for future reference as they contain important information.

 


Imported by:  
**Character Options Ltd.**,  
Lees Brook Mill, Lees Road,  
Lees, Oldham OL4 5JL UK  
**Customer Service Department**  
Tel No: **0161 633 9808**  
**Made in China**

[www.character-online.co.uk](http://www.character-online.co.uk)

**PROXY A/S**

GOTHERSGADE 12, 1ST FLOOR DK-1123  
COPENHAGEN K, DENMARK  
[WWW.PROXYAS.COM](http://WWW.PROXYAS.COM)

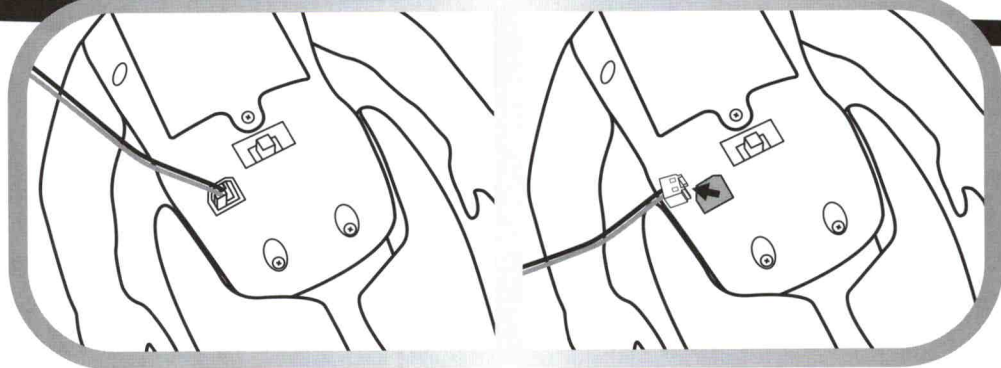


### REMOVING THE TUTU

To remove the tutu from the doll, first gently unplug the cable connected to the dress from the body of the doll (see diagram above). This will deactivate the light-up function in the dress. When putting the dress back on the doll, ensure that you plug the cable back in to enable the light-up tutu function.

### MAKE BALLERINA SHUFFLE HER FEET



Stand Ballerina on a flat surface and turn the switch located on her back to "ON". Hold on to the top of Ballerina's tiara and pull it upward. Ballerina will begin to shuffle her feet. **Disclaimer:** Ballerina's legs are designed in a way so that she can kick and spin, one leg will naturally sit slightly longer than the other in order to maximize Ballerina's performance.

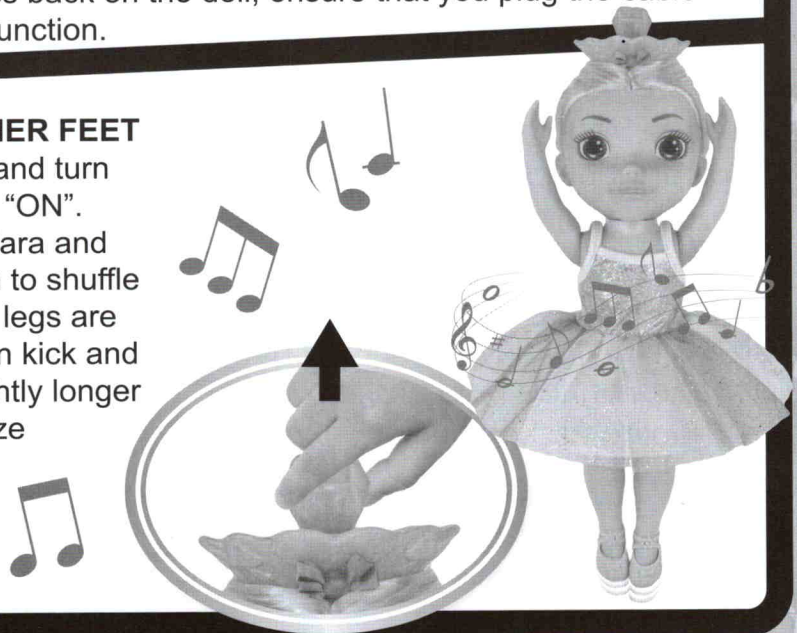

3+  
YEARS

### MAKE BALLERINA KICK

To make Ballerina Spin and Kick at the same time, place the switch on Ballerina's back to the "ON" position. Stand her upright on a flat surface. Press down on her tiara and she will kick her leg and twirl. If Ballerina's foot is slightly forward, she will kick forward. If Ballerina's foot is slightly back, she will kick backwards. Ballerina can also practice her ballet when the switch is in the "OFF" position too. Switch Ballerina "OFF" and press down on her tiara and she will kick forward and backward without playing music or spinning.

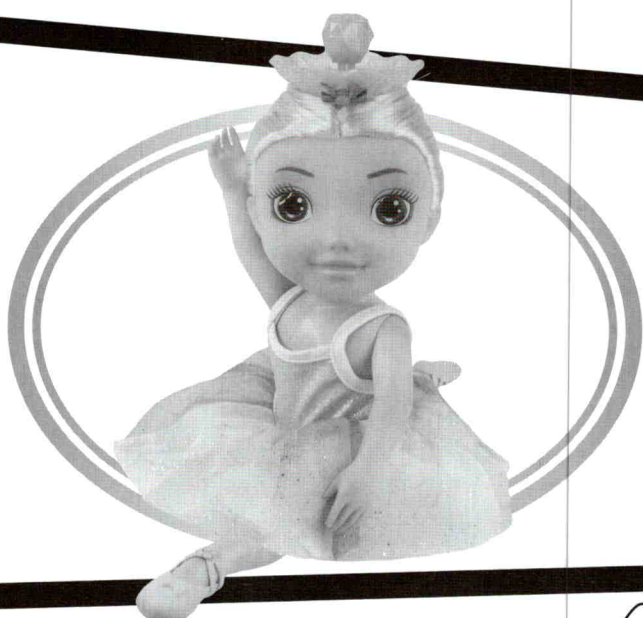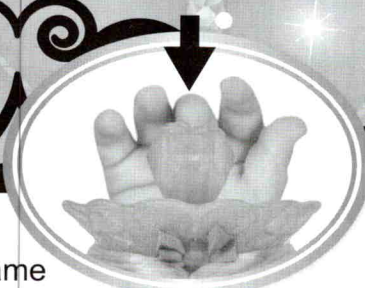

### MAKE BALLERINA DO THE SPLITS

Place the switch on Ballerina's back to the "OFF". To make Ballerina do the Splits, gently pull on her left leg to unlock it and place Ballerina in the Splits position.

### TROUBLESHOOTING

In order to comply with Toy and Safety Regulations, the legs on this doll are detachable. This is not a product fault and if the legs do become detached from the body, they can be easily locked back in by aligning the matching shapes on the legs and hip and snapping into place.

