 




INSTRUCTIONS

3+ YEARS

MEET CALL ME CHLOE. SHE LOVES TO TALK ABOUT EVERYTHING! FROM SHOPPING, TO FOOD TO GAMES, SHE CAN TALK FOR HOURS. YOU'LL BE THE BEST OF FRIENDS IN NO TIME!

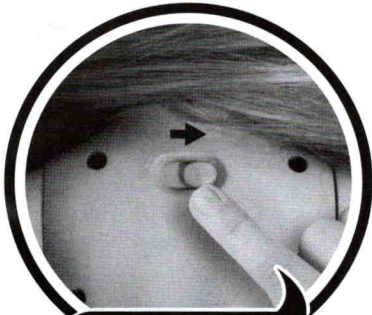

1. Ensure Chloe Doll is switched on by moving switch toward Chloe's right shoulder.



2. Using the large phone, press the "Phone" icon to begin the call with Chloe. Ensure you have the large phone positioned facing Chloe.



3. Chloe's phone will then begin to ring, she will lift her phone to her ear and prompt the user to select a topic of conversation.



4. Press one of the 9 topic icons to begin your conversation with Chloe.



5. Chloe will talk to you about the selected topic.



6. Chloe will then prompt you to select another topic to talk to her about.

ADDITIONAL INFORMATION

HELPFUL HINTS

1. To avoid battery drainage/if no one is interacting with Chloe, she will prompt you to have a conversation by saying phrases like "Oh no, did you forget about me?", "Call me and we can talk!".

 
2. If you move the switch on Chloe's back to the left, this will activate **TRY ME** mode and Chloe will only work by pressing the button on her tummy.

3. "If Chloe is left unattended for about four minutes, she will go into sleep mode. To wake her up, turn the power switch to "OFF" and then to "ON".

SWITCH MODES



7. When the phone is over Chloe will say "Bye Bye" and lower her phone.

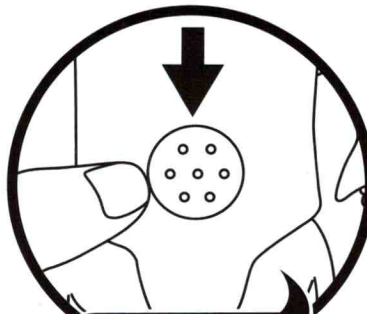

There is a button on Chloe's tummy. This is for Try Me purposes in store only.

SWITCH OFF WHEN NOT IN USE

 
Manufactured by:
HUNTER PRODUCTS PTY LTD
LEVEL 2
424 WARRIGAL ROAD
MOORABBIN
VIC 3189
www.hunterproducts.com.au




PHONE INSTRUCTIONS

PRESS ANY OF THE ICONS ON CHLOE'S PHONE TO HEAR HER TALK ABOUT HER FAVOURITE TOPICS. SHE CAN TALK FOR HOURS!


3+ YEARS

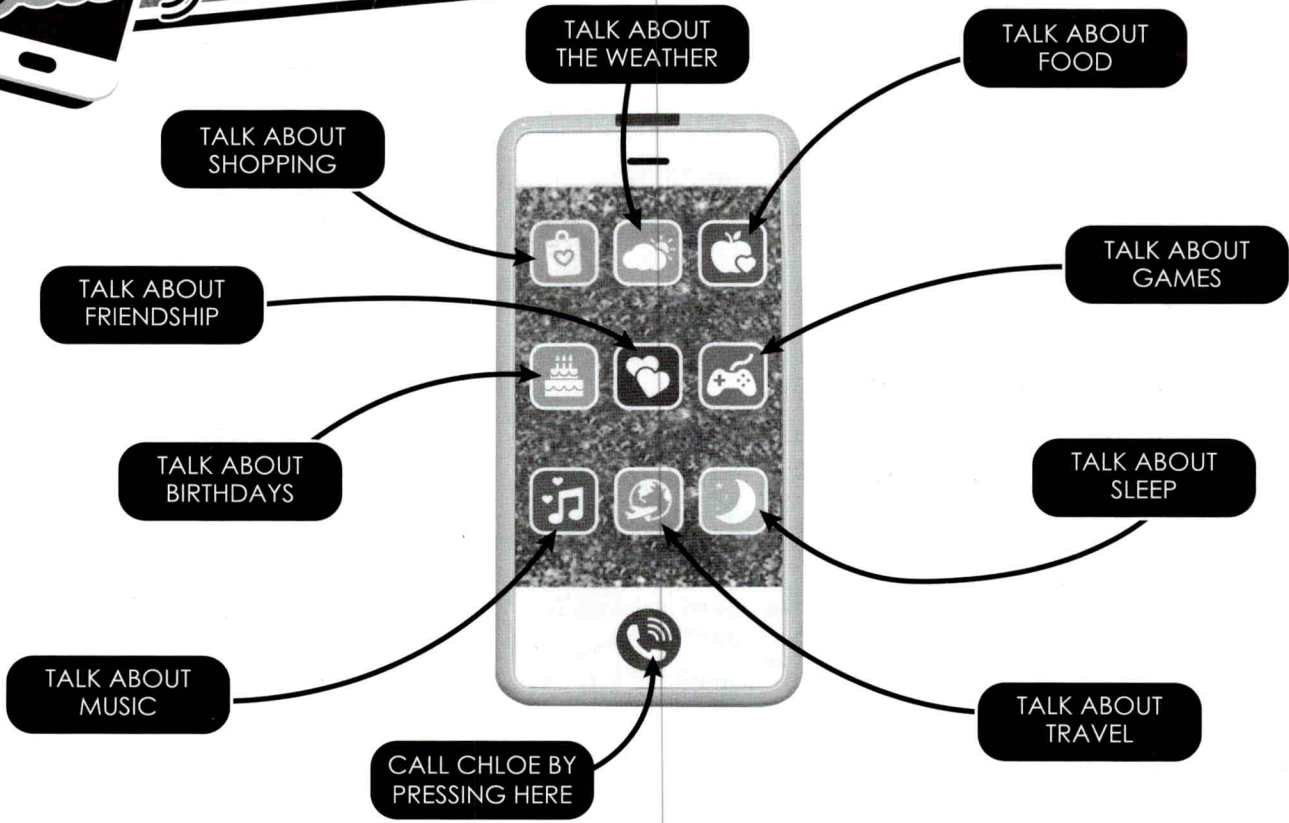

 Chloe Doll Requires 3 x AA Batteries. (Demonstration Batteries Included).

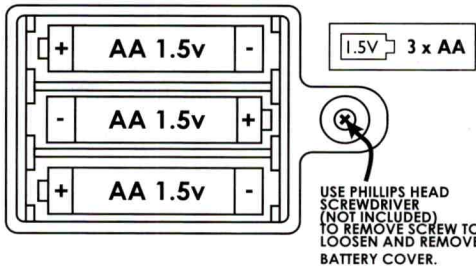

 Phone Requires 3 x 1.5V A76/AG13/LR44 Batteries. (Batteries Not Included).

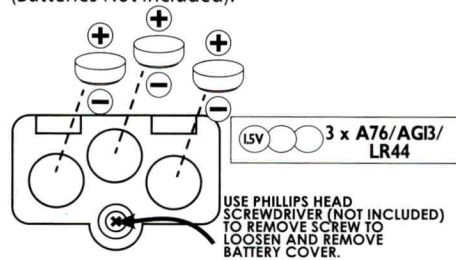

- Alkaline batteries recommended.
- Rechargeable batteries must only be recharged under adult supervision.
- Rechargeable batteries must be removed from the toy before recharging.
- Non-rechargeable batteries must not be recharged.
- Different types of batteries, or new and used batteries must not be mixed.
- Only batteries of the same or equivalent type as recommended should be used.
- Batteries should be replaced by an adult.

- Batteries must be inserted following the correct polarity.
- Exhausted batteries should be removed from the product.
- The supply terminals must not be short-circuited.
- Batteries should be removed from the product when not in use.
- Do not dispose of batteries in fire.
- Batteries supplied are for demonstration purposes only and may require replacing within a short period of time.

CAUTION:

SWALLOWING MAY LEAD TO SERIOUS INJURY OR DEATH IN AS LITTLE AS 2 HOURS DUE TO CHEMICAL BURNS AND POTENTIAL PERFORATION OF THE OESOPHAGUS.

DISPOSE OF USED BATTERIES IMMEDIATELY AND SAFELY. FLAT BATTERIES CAN STILL BE DANGEROUS.

EXAMINE DEVICES AND MAKE SURE THE BATTERY COMPARTMENT IS CORRECTLY SECURED, E.G. THAT THE SCREW OR OTHER MECHANICAL FASTENER IS TIGHTENED.

DO NOT USE IF COMPARTMENT IS NOT SECURE

IF YOU SUSPECT YOUR CHILD HAS SWALLOWED OR INSERTED A BUTTON BATTERY, CALL THE 24 HOUR POISONS INFORMATION CENTRE IN AUS ON 131126 OR IN NZ 0800 764 766 OR CONTACT YOUR COUNTRY'S EMERGENCY DEPT.



BATTERY RECYCLING INFORMATION

Help the environment by disposing of batteries responsibly. The wheellie bin symbol indicates that batteries must not be disposed of in domestic waste as they contain substances which can be damaging to the environment and health. Please remove exhausted batteries from the product and use designated collection points or recycling facilities when disposing of batteries.

Pb (Lead is more than 0.004%)



WARNING! CHOKING HAZARD.

Not suitable for children under 36 months. Choking hazard (small parts). Please remove all packaging attachments before giving this product to a child. Please use discretion if making purchases for children younger than the age recommended on this package. At the end of the useful life of this product do not dispose in normal household waste. Check with your local authority or responsible disposal centre and submit to the collection point for the recovery and recycling of electrical and electronic equipment. Product specifications, colour and contents may vary from those illustrated.

IMPORTANT: Please retain packaging/instructions and purchase details for future reference as they contain important information.



Imported by:
Character Options Ltd.,
Lees Brook Mill, Lees Road,
Lees, Oldham OL4 5JL UK
Customer Service Department
Tel No: **0161 633 9808**
Made in China

www.character-online.co.uk

PROXY A/S
Gothersgade 14, 4th Floor DK-1123
Copenhagen K, Denmark
www.proxyas.com

Item: Call Me Chloe
Item Number: HUN8599
Age Grade: 3 years plus

SWITCH OFF WHEN NOT IN USE

RECYCLING OUR PRODUCTS

All our product and packaging is designed with easy and safe recycling in mind. For information on the **National Recycling Strategy** and the recycling logo on this pack or product please visit - www.RecycleManzoniuk - where you will find the answers to your UK recycling questions.



WARNING!

Button cell batteries can cause serious injury or death if swallowed. Dispose of safely! Store batteries out of reach of children.

Visit TheBatteryControlled.com.au

Manufactured by:
HUNTER PRODUCTS PTY LTD
LEVEL 2
424 WARRIGAL ROAD
MOORABBIN
VIC 3189

www.hunterproducts.com.au