


## INSTRUCTIONS FOR USE

Please keep this instructions for future reference

## BATTERY INSERTION AND REPLACEMENT

1. Unscrew the top part to remove the battery lid.
2. Insert 2 "AA" (LR6) batteries (included), negative end (-) first into battery compartment. Match positive (+) and negative (-) signs as shown in image. Batteries may leak if improperly installed. Remove the batteries when toy is not used for an extended period of time.
3. To replace lid, fit tabs into slots and screw closed.

Diagram to show how to open the battery door and insert batteries.

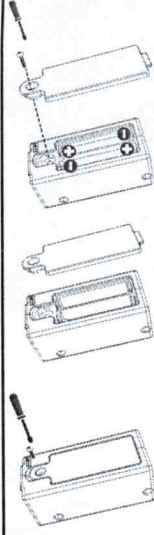

### Requires 2 x AA Batteries. (Demonstration Batteries included).

- Alkaline batteries recommended.
- Rechargeable batteries must only be recharged under adult supervision.
- Rechargeable batteries must be removed from the toy before recharging.
- Non-rechargeable batteries must not be recharged.
- Different types of batteries, or new and used batteries must not be mixed.
- Only batteries of the same or equivalent type as recommended should be used.
- Batteries should be replaced by an adult.
- Batteries must be inserted following the correct polarity.
- Exhausted batteries should be removed from the product.
- The supply terminals must not be short-circuited.
- Batteries should be removed from the product when not in use.
- Do not dispose of batteries in fire.

## BATTERY SAFETY INFORMATION

Only adults should install and replace batteries correctly. Match positive (+) and negative (-) signs as shown in image. Alkaline batteries are recommended for best performance. Rechargeable batteries are not recommended. If rechargeable batteries are used, they are only to be charged under adult supervision. Rechargeable batteries are to be removed from the product before they are charged. Do not recharge non-rechargeable batteries. Only use batteries of the same or equivalent type that are recommended for use. Do not mix different types of batteries; alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium). Do not mix old and new batteries. Remove dead or exhausted batteries. Remove the batteries during long periods of non-use. Always remove exhausted batteries from the toy. Battery leakage and corrosion can damage this product. Dispose of batteries safely. Recycle where available. Do not dispose of batteries in a fire or attempt to open the outer casing. Never short-circuit the battery terminals. Do not immerse-operated toys in water. Wipe clean only.

## ELECTRONIC WASTE (Including batteries)

The wheelite bin symbol indicates the product and batteries must not be disposed of in domestic waste as they contain substances damaging to the environment and health. Please use collection points or recycling facilities.



## BATTERY RECYCLING INFORMATION

Help the environment by disposing of batteries responsibly. The wheelite bin symbol indicates that batteries must not be disposed of in domestic waste as they contain substances which can be damaging to the environment and human health. Please remove exhausted batteries from the product and use designated collection points or recycling facilities when disposing of batteries.

Pb (Lead is more than 0.004%)

Pb

**Manufactured by:**  
Eco Toys Ltd  
Blox 201 West, Royal Jewellery Centre  
4 New Area St, East Hong Kong  
Bowden, Hong Kong



© Eco Toys 2020  
**Imported by:**  
Jiggly Pets Ltd  
100 Yee Hong St, S.L.  
17 Manstone Valley, 60, 17th Fl.  
33002 Gijón, Asturias, Spain

**Character Online Ltd.**  
Cheong Cheong, 108 West Road,  
Level 10, Singapore 04 136, SINGAPORE  
Company No: **0161 633 9808**  
Made in China  
[www.character-online.co.uk](http://www.character-online.co.uk)



**WARNING! CHOKING HAZARD.**  
Not suitable for children under 36 months. Choking hazard (small parts). Please remove all packaging attachments before giving this product to a child. Please use discretion if making purchases for children younger than the age recommended on this package. At the end of the useful life of this product, do not dispose in normal household waste. Check with your local authority or responsible disposal centre and submit to the collection point for the recovery and recycling of electrical and electronic equipment. Product specifications, colour and content may vary from those illustrated.  
**IMPORTANT:** Please retain packaging instructions and purchase details for future reference as they contain important information.

**Item: JIGGLY UNICORN /  
JIGGLY PUP DOG**  
**Item Number: JP002/JP001**  
**Age Grade: 4 years plus**

**RECYCLING OUR PRODUCTS**  
All our products and packaging is designed with easy recycling in mind. We are committed to the National Recycling Strategy and the recycling logo on this pack or product please visit [www.Recycle-More.co.uk](http://www.Recycle-More.co.uk) - where you will find the answers to your UK recycling questions.



