



## Know your Squeeze Ball Creator

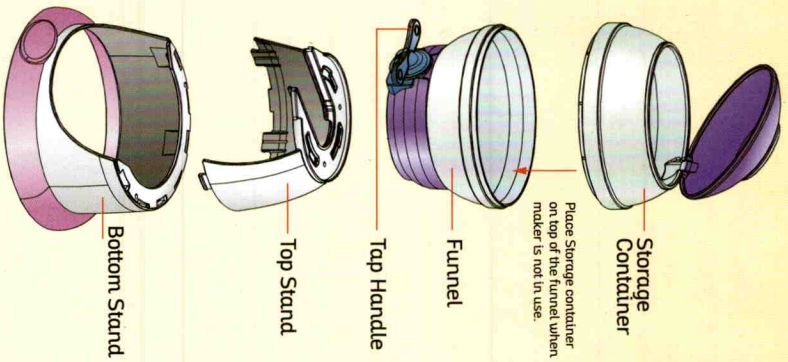


NOT COMPATIBLE WITH OTHER PRODUCTS.


- 1** Align the tabs and press Top stand down onto the Bottom stand until it clicks in place.

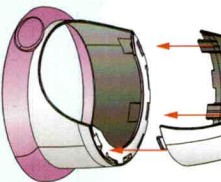


- 2** Align the tabs and press Funnel down onto the Top Stand.

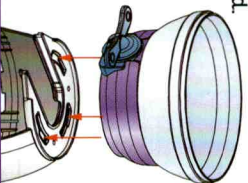

- 3** Rotate Funnel clock-wise against Top Stand to lock.

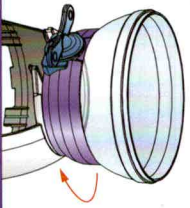


- 1** Unscrew and remove the Squeeze Ball's Screw Cap using the Turn Key.

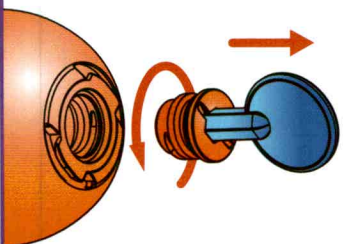


- 3** HOLD BASE and slide Squeeze Ball all the way to the end of the rail.


Making sure Ball clicks into place.

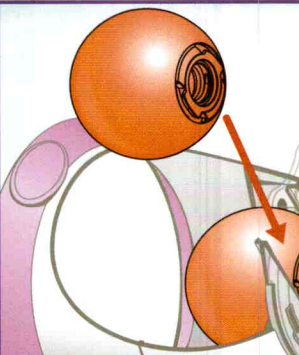

- 2** Place Icons into the Squeeze Ball.  
TIP: 7 Icons per Squeeze Ball is the best.

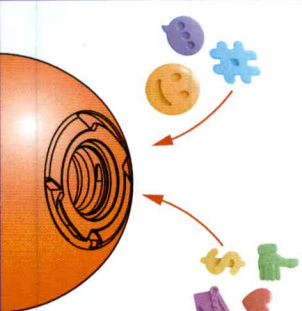

- 4** Lift Container to remove from Funnel and set aside.

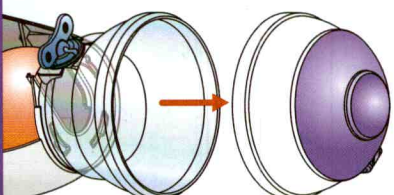

**⚠ WARNING: DO NOT HEAT OR MICROWAVE. DO NOT PIERCE. DO NOT LEAVE IN VEHICLE ON HOT DAY.**

**WARNING:**

- DO NOT PIERCE THE SQUEEZE BALL.
  - DO NOT APPLY HEAT DIRECTLY TO THE SQUEEZE BALL OR ANY OTHER ACCESSORIES.
  - ICONS ARE A CHOKING HAZARD. DO NOT PLACE THEM INTO YOUR MOUTH OR NOSE.
  - DISPOSE OF BROKEN OR DEFLATED THE SQUEEZE BALLS IMMEDIATELY.
  - DO NOT PUT ANY OF THE FOLLOWING INTO THE SQUEEZE BALL:
    - OBJECTS WITH SHARP POINTS OR SHARP EDGES
    - ANY FOOD, BEVERAGES OR PERISHIBLE ITEMS
    - CLEANING PRODUCTS OR CHEMICALS
  - DROPPING THE SQUEEZE BALL CREATOR MAY CAUSE DAMAGE AND PREVENT ITS FUNCTIONS.
  - IF THE SQUEEZE BALL RUPTURES AND LIQUID CONTACTS SKIN, WASH WITH CLEAN WATER. DO NOT EAT.
- CAUTION:** PRODUCT IS A STRESS BALL, NOT APPROPRIATE FOR CHILDREN UNDER THE AGE OF 3. ADULT SUPERVISION SHOULD BE ENCOURAGED FOR YOUNG CHILDREN. IF PRODUCT RUPTURES AND LIQUID CONTACTS SKIN, WASH WITH CLEAN WATER. DO NOT EAT OR DRINK CONTENTS.
- IMPORTANT:** HAND WASH WITH WARM WATER. EXCESSIVE SQUEEZING OR ABRASION MAY LEAD TO A LOSS OF STRUCTURAL INTEGRITY. DISCARD BROKEN OR RUPTURED THE SQUEEZE BALL. CLEAN AND DRY SQUEEZE BALL CREATOR BEFORE STORAGE.

**WARNING: CHOKING HAZARD.**

Not suitable for children under 36 months. Choking hazard (small parts). Please remove all packaging attachments before giving this product to a child. Please use discretion if making purchases for children younger than the age recommended on this package. Product specifications, colour and contents may vary from those illustrated. **IMPORTANT:** Please retain packaging / instructions and purchase details for future reference as they contain important information.



**RECYCLING OUR PRODUCTS**

All our product and packaging is designed with easy and safe recycling in mind. For information on the **National Recycling Strategy** and the recycling logo on this pack, or product please visit [www.Recycle-More.co.uk](http://www.Recycle-More.co.uk) - where you will find the answers to your UK recycling questions.



Art No: 09019-080322-VA

**PATENT PENDING.**

Item: The Squeeze Ball Creator  
Item Number: 07715  
Age Grade: 3 years plus



Manufactured by  
**Character Options Ltd,**  
Lees Brook Mill, Lees Road,  
Lees, Oldham OL4 5JL, UK  
Customer Service Department  
Tel No: **0161 633 9808**  
Made in China

[www.character-online.co.uk](http://www.character-online.co.uk)

**PROXY A/S**

Gøthersgade 14, 3<sup>rd</sup> Floor DK-1123  
Copenhagen K, Denmark  
[www.proxyas.com](http://www.proxyas.com)

**CONTENTS**

- 3** Squeeze Ball assorted colour)
- 21** Icons (random)
- 1** Squeeze Ball Creator
- 1** Turn Key
- 1** Instruction sheet


**THE SQUEEZE BALL CREATOR**

OUR AGES  
**5+**


**5** Ensure Tap Handle is in the **CLOSED** position. Pour water into the Funnel up to the fill line.




**6** To use your own fillings (Not Included), gently stir it with water with the Turn Key until mixed.

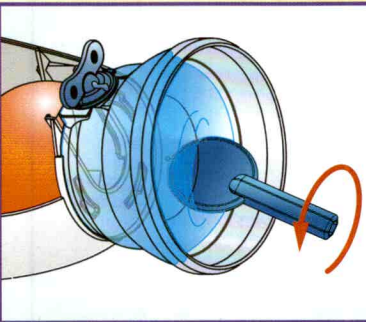


**8** Once Squeeze Ball is full but not overflowing, turn handle to the **CLOSED** position.

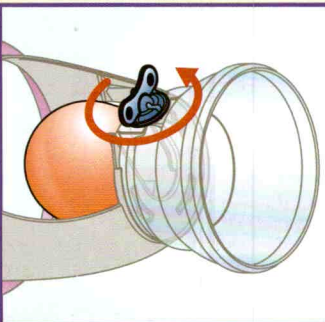

**9** Twist counterclockwise to release Funnel, remove and set aside.

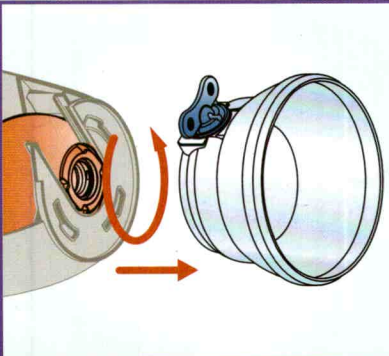


**10** While holding the rim of the Squeeze Ball, use the Turn Key to tighten Screw Cap onto Squeeze Ball.

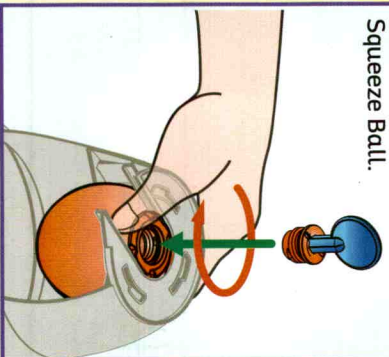


**12** You have made an the Squeeze Ball! All that's left is to squeeze it!



**7** Slowly turn handle to the **OPEN** position. Your Squeeze Ball will start to fill.

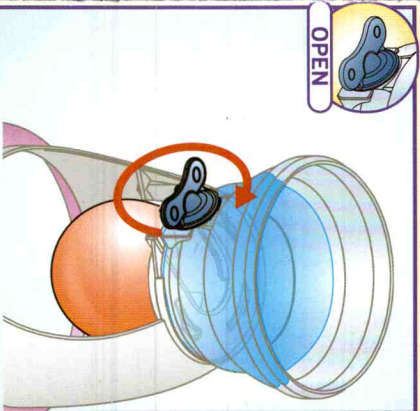

**11** Slide Squeeze Ball off the Top Stand.

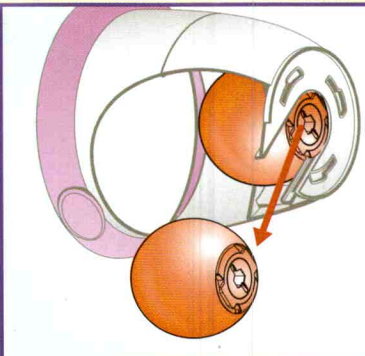

## REUSABLE!


The Squeeze Balls are re-usable. Why not choose your own fillings (Not included) such as Slime, Pom Poms or Sequins to create your own unique Squeeze Balls.

**IMPORTANT:** If you notice the liquid inside the Squeeze Ball has become cloudy or looks dirty in any way we recommend you dispose of the Squeeze Ball directly into the general waste bin, without opening the Squeeze Ball.

## TIPS

- **Disposing/ cleaning of the Squeeze Ball.**  
**DO NOT** pour contents of the Squeeze Ball down the drain.
- **Emptying/ cleaning the Squeeze Ball for later use:**
  1. Place two stacked paper towels over sink drain.
  2. While holding the Squeeze Ball, carefully unscrew the cap from the Squeeze Ball using Turn Key.
  3. Set the cap aside and slowly pour the contents of the ball over the paper towels, down the sink.
  4. Pick out icons from the paper towels so they may be re-used.
  5. Once the contents have been emptied and filtered through the paper towel, dispose of paper towel in general waste.
  6. Rinse out Squeeze Ball with warm water and air dry before storage.

### • Tap Use.

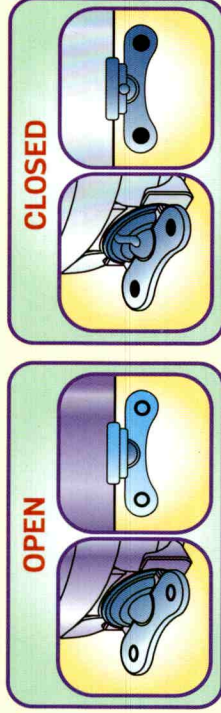

### • Clean and dry Squeeze Ball Creator before storage.

1. Rinse Funnel with cold water.
2. Allow Funnel to air dry.
3. Re-assemble Squeeze Ball Creator for storage.


## TROUBLESHOOTING

### • Water leaking around Squeeze Ball when filling.



- Ensure Funnel has been assembled onto Top Stand properly. If Funnel has not been properly connected, water may leak around Squeeze Ball.
- Ensure Squeeze Ball is pushed to end of rail.

### • Water leaking from the Squeeze Ball around Screw Cap.

- Ensure Screw Cap has been screwed on correctly.
- Ensure rubber washer is on the Screw Cap and is not caught or stuck out of its usual position during assembly.


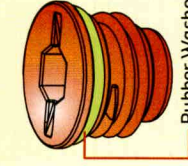


Rubber Washer

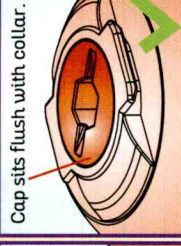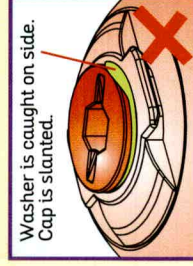

### • Squeeze Ball Creator's Handle won't open or close, becomes jammed or the valve becomes blocked.

- Use running water to clear the blockage. If running water alone does not work, then shake the unit under running water until blockage is cleared.
- Do not insert fingers or any tools into the unit.

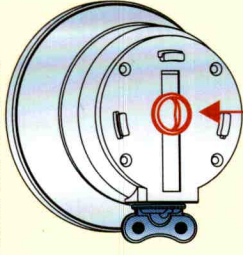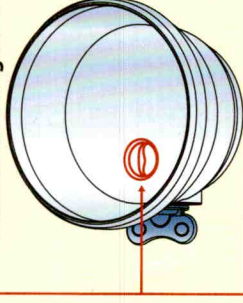

FUNNEL

### • The Squeeze Ball becomes dirty.

- Hand wash in cold water and air dry. Do not use any detergents, as it may damage the ball.