 
 


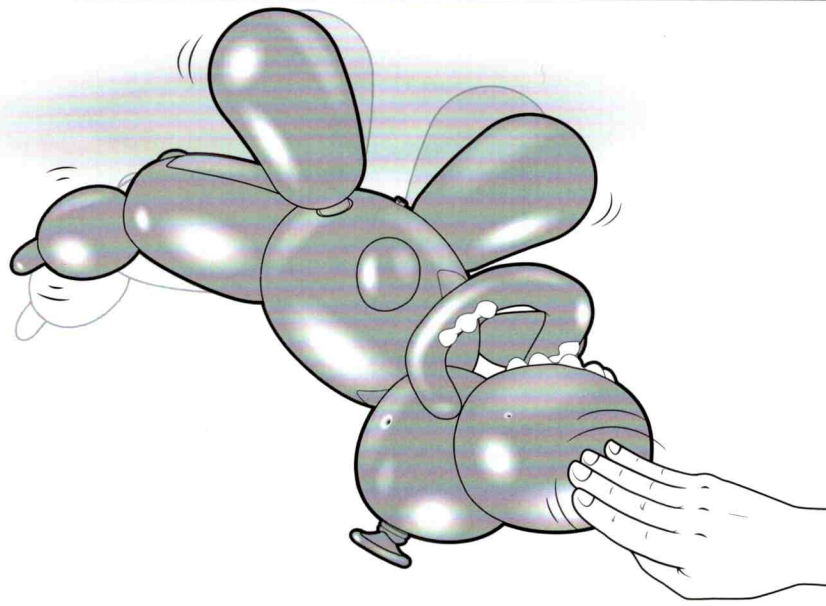

Pet Squeakee Dino's nose and he will nuzzle.
Keep petting and Squeakee Dino will walk and play!

PETTING


can walk in 2 ways:

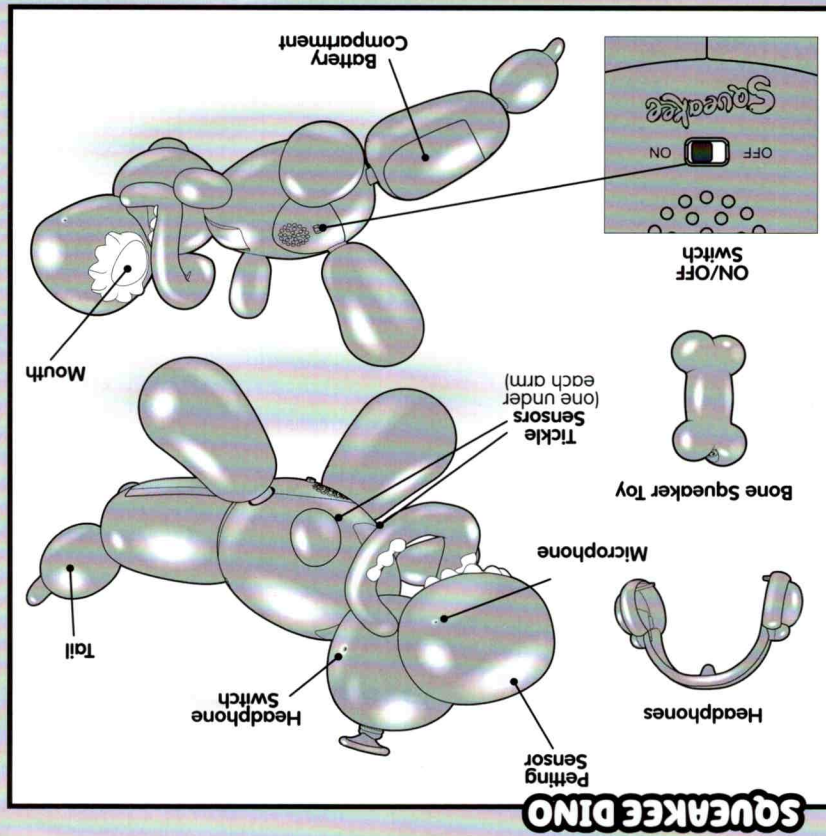

CHICKEN

Squeakee Dino:

- Quickly press the roof of Squeakee Dino's mouth with your finger to play Chicken.

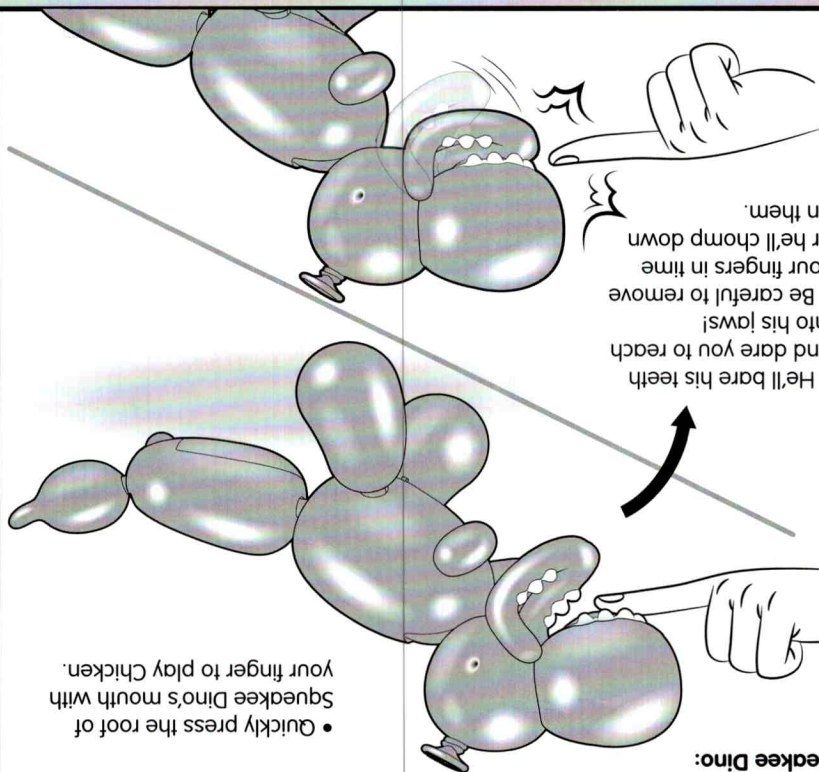

- He'll bare his teeth and dare you to reach into his jaws!
- Be careful to remove your fingers in time or he'll chomp down on them.

TROUBLESHOOTING

- Ensure the Headphones are seated securely on Squeakee Dino's head. Do this by aligning the pin into the knot on top of his head, and ensuring the small pins on each side of the headphones have located into Squeakee Dino's ear holes. Slightly lift the Headphones out of the ear holes and place back if you want Squeakee Dino to dance again.

Squeakee Dino is not reacting to your voice:

- Check Microphone is not covered (side of nose).
- Speak closer to the Microphone.

Squeakee Dino is not properly Popping or Inflating:

- Ensure you are pulling just the last section of tail firmly outward from Squeakee Dino's body.
- Use one hand to hold Squeakee Dino in place while the other hand pulls or pumps the tail.
- You can only inflate Squeakee Dino when he is in the laying position.
- Squeakee Dino will only inflate when you pull the tail rapidly many times.

Squeakee Dino is not playing Tug of War or Chicken properly:


- The button to activate Tug of War and Chicken is just on the roof of Squeakee Dino's mouth.
- Ensure you are pressing firmly upwards on the roof of Squeakee Dino's mouth to activate his play features.
- Don't pull the Bone Squeaker Toy too hard during Tug of War as it will be released from Squeakee Dino's jaws.

Where to play with Squeakee Dino:

- It's preferable you play with Squeakee Dino on a ground surface.
- Squeakee Dino's function may be affected by carpeted surfaces.
- Do not use Squeakee Dino on a raised surface (such as a table).

Squeakee Dino c

WALK & PLAY

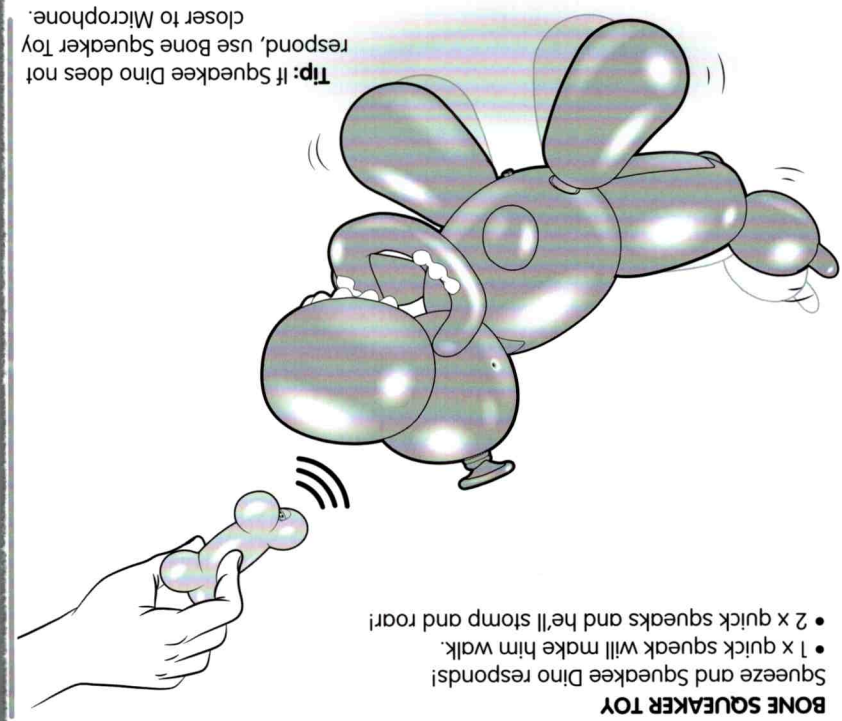

INSTRUCTION BOOKLET

WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.

 
 
5+



Squeakee
THE BALLOON
DINO

DANCE

Carefully place the Headphones on Squeakee Dino's head (ensuring they engage into both ear holes).

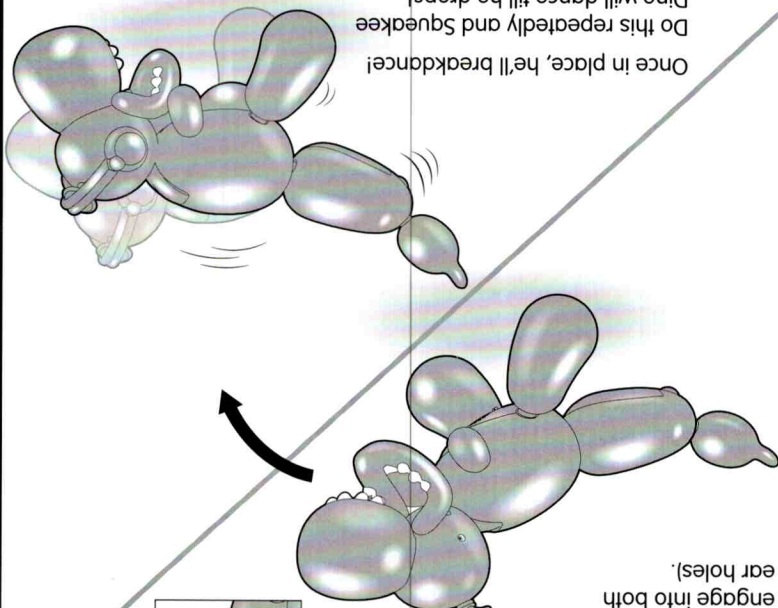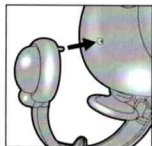

WARNING: DO NOT PLAY SOUNDS CLOSE TO YOUR EAR! NOT SUITABLE FOR CHILDREN UNDER 3 YEARS.
CAUTION: ADULT SUPERVISION SHOULD BE ENCOURAGED FOR YOUNG CHILDREN. PLEASE REMOVE ALL PACKAGING ATTACHMENTS BEFORE GIVING THIS PRODUCT TO A CHILD. KEEP HAIR AND LOOSE CLOTHING AWAY FROM MOVING PARTS.
IMPORTANT: DROPPING SQUEAKEE™ TOY MAY CAUSE DAMAGE THAT PREVENTS SQUEAKEE™ FUNCTIONS. PLEASE RETAIN PACKAGING AND INSTRUCTIONS FOR FUTURE REFERENCE SINCE THEY CONTAIN IMPORTANT INFORMATION. READ ALL INSTRUCTIONS CAREFULLY BEFORE USING PRODUCT. COLOURS AND CONTENTS MAY VARY. PRODUCT DOES NOT CONTAIN ACTUAL BALLOONS. THE TOY IS NOT TO BE CONNECTED TO MORE THAN THE RECOMMENDED NUMBER OF POWER SUPPLIES. (1 BATTERY BOX PROVIDED). INDOOR TOY, WORKS BEST ON FLAT, LEVEL, HARD SURFACE.

RECYCLING OUR PRODUCTS
 All our product and packaging is designed with easy and safe recycling in mind. For information on the National Recycling Strategy and the recycling logo on this pack or product please visit www.Recycle-More.co.uk - where you will find the answers to your UK recycling questions.



Please use discretion if making purchases for children younger than the age recommended on this package. At the end of the useful life of this product do not dispose in normal household waste. Check with your local authority or responsible disposal centre and submit to the collection point for the recovery and recycling of electrical and electronic equipment.



CONTENTS:
 • 1 ELECTRONIC TOY
 • 2 ACCESSORIES
 • 1 INSTRUCTION MANUAL



Item: SQUEAKEE THE BALLOON DINO S2
 Item Number: 12310
 Age Grade: 5 years plus



www.character-online.co.uk

Distributed by:
Character Options Ltd.
 Lees Brook Mill, Lees Road,
 Customer Service Department
 Tel No: **0161 633 9808**
 Made in China

 


WWW.SQUEAKEETHEPETS.COM

©2020 The Moose Group

ROAR


Squeakee Dino responds to your voice.
Roar and scream and he'll roar back at you!
If you roar too much, Squeakee Dino might run away scared, or even pop!

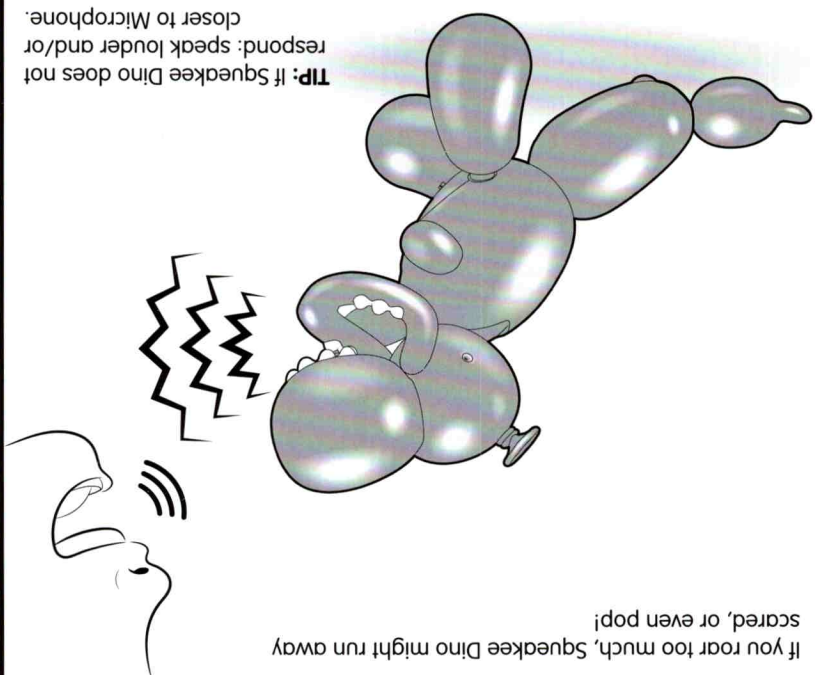

TIP: If Squeakee Dino does not respond: speak louder and/or closer to Microphone.

INFLATE


Any time Squeakee Dino is in a laying position (either from being popped or sleeping), you can re-inflate him by quickly pumping his tail many times.

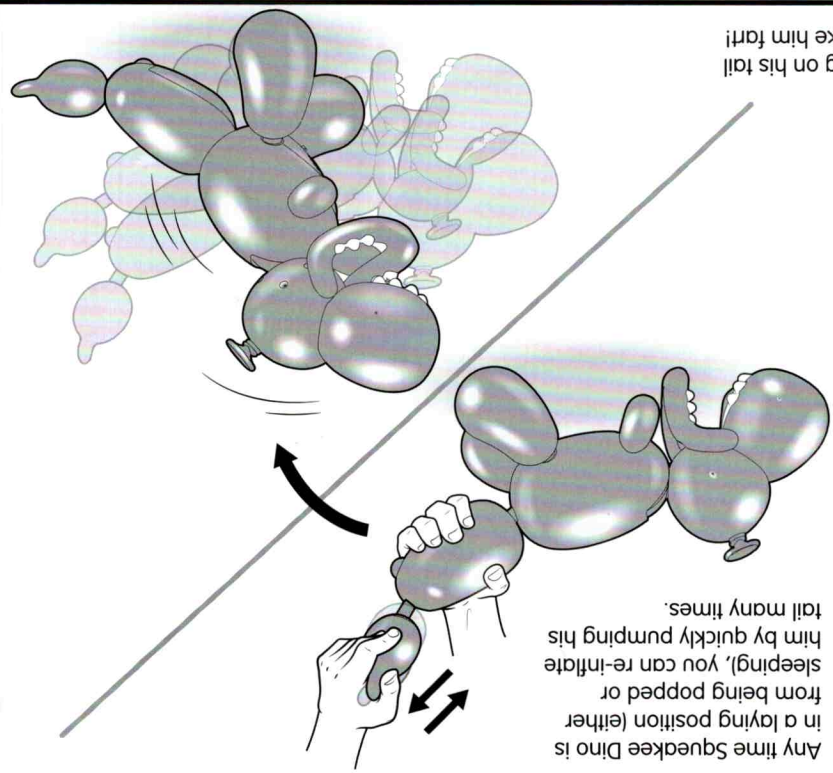

ling on his tail
wake him fart!

TICKLING

Tickle Squeakee Dino's arms and watch him throw his head back and laugh. The more you tickle, the more hysterical he gets!

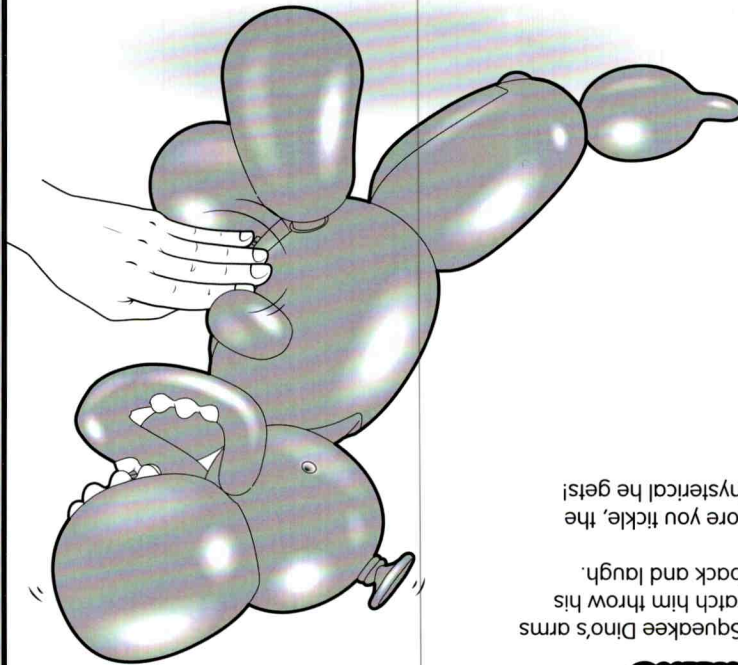


Help the environment by disposing of your product and batteries responsibly. The wheeled bin symbol indicates that the product and batteries must not be disposed of in the domestic waste, as they contain substances which can be damaging to the environment and health. Please use designated collection points or recycling facilities when disposing of the item or batteries.

More information can be found on: <http://www.recycle-more.co.uk> | www.recyclenow.com

SLEEPING

When you don't play with Squeakee Dino, he will occasionally roar and dance for attention.

Squeakee Dino will eventually get tired and slouch. Continue to leave him, and he will deflate and fall asleep.

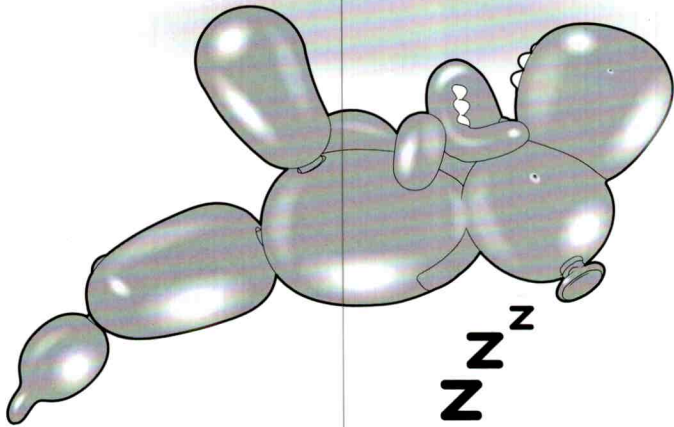


TIP: You can wake Squeakee Dino at anytime by:

- Pulling his Tail
- Pressing his Mouth
- Turning switch from 'ON' to 'OFF,' then back to 'ON,'
- Placing headphones on head.

BATTERIES


Requires 6 x AA/LR06 Batteries (placed in Tail). (Batteries not included). Cross head screwdriver (not included) needed to replace batteries.

- Alkaline batteries recommended.
- Rechargeable batteries must only be recharged under adult supervision.
- Rechargeable batteries must be removed from the toy before recharging.
- Non-rechargeable batteries must not be recharged.
- Different types of batteries, or new and used batteries must not be mixed.
- Only batteries of the same or equivalent type as recommended should be used.
- Batteries should be replaced by an adult.
- Batteries must be inserted following the correct polarity.
- Exhausted batteries should be removed from the product.
- The supply terminals must not be short-circuited.
- Batteries should be removed from the product when not in use.
- Do not dispose of batteries in fire.
- Do not attempt to power battery products by the introduction of main supply or separate power supplies, and do not attempt to plug any part of this product into the mains supply.

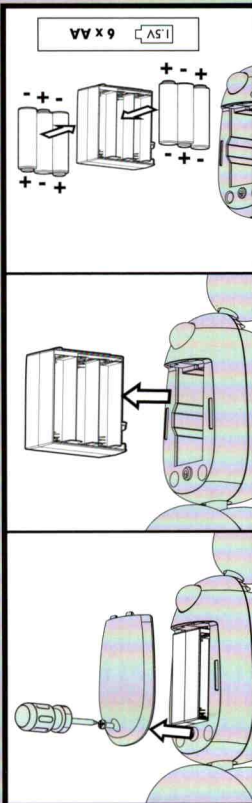


POP

You can pop Squeakee Dino by pulling on his tail.

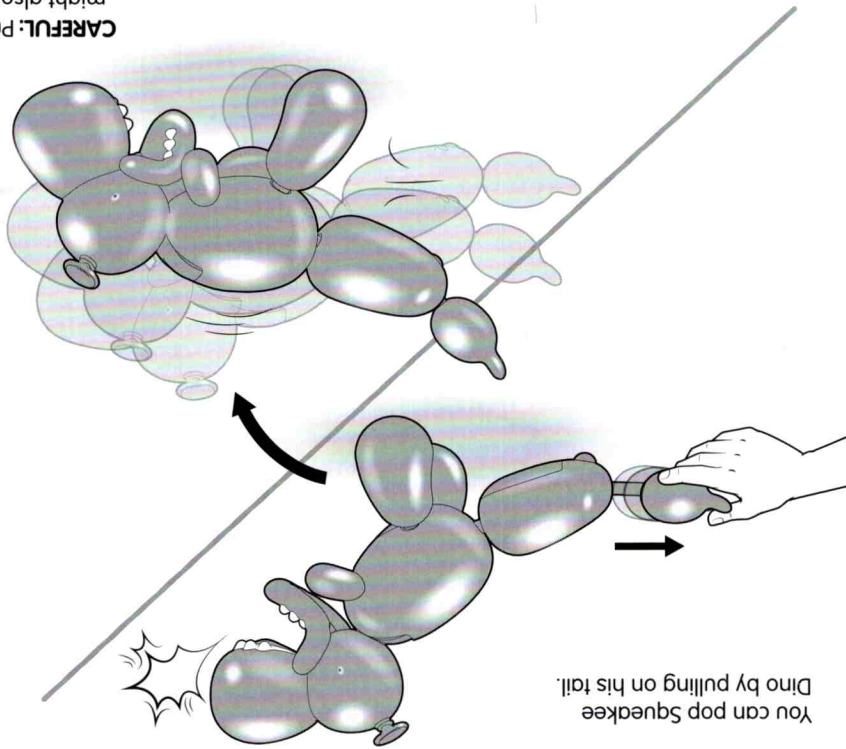

CAREFUL: Pulling might also n

TUG OF WAR

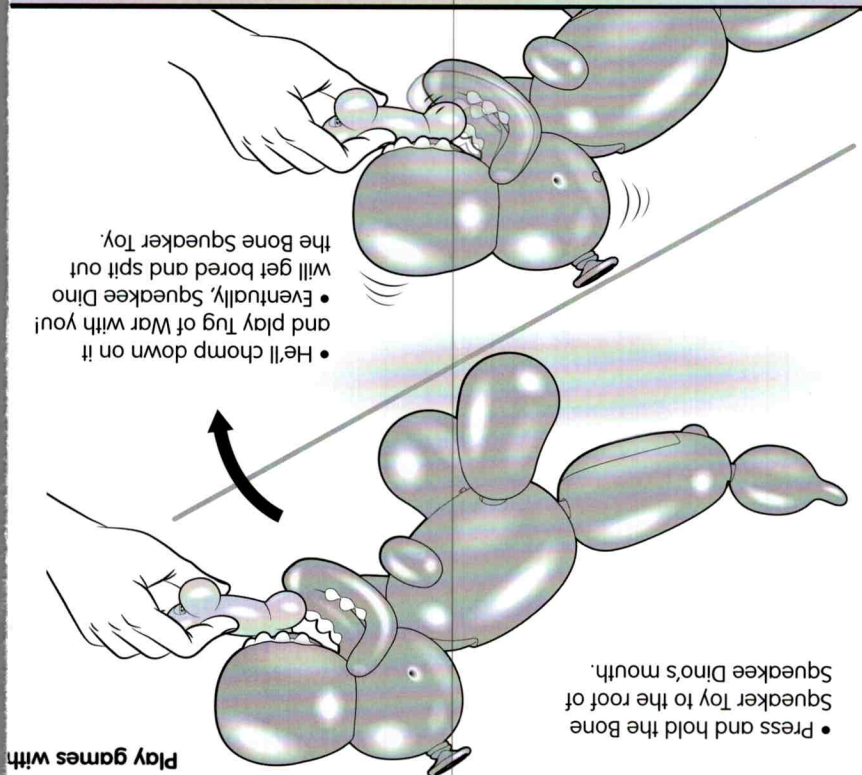

- Press and hold the Bone Squeaker Toy to the roof of Squeakee Dino's mouth.

- He'll chomp down on it and play Tug of War with you! Eventually, Squeakee Dino will get bored and spit out the Bone Squeaker Toy.

TROUBLESHOOTING

For best performance and to avoid any potential malfunction, do not restrict movement of the legs or head.

Function does not match instructions. Squeakee Dino moves slowly or not at all:

- Always ensure switch is 'ON,' not in the 'OFF' position.
- Battery may be low. Low batteries may not allow full function.
- Insert 6 fresh batteries as described in the 'Batteries' page of this manual.
- Always ensure they are placed in the correct polarity.
- Squeakee Dino may be in sleep mode. In this case:
 - Turn switch from 'ON' to 'OFF,' then back to 'ON'

Petting or tickling does not yield animations or sounds:

- Ensure you're stroking the Petting Sensor area on Squeakee Dino's snout or Tickle Sensor area on Squeakee Dino's underarm area directly.
- Increase contact area of your hand.

Squeakee Dino does not respond to the Bone Squeaker Toy:

- Bring the Bone Squeaker Toy closer to Squeakee Dino when squeezing.
- Ensure short gap between squeaks.
- Ensure there is no excessive background noise.

Short battery life:

- Switch Squeakee Dino 'OFF' when not in use.
- Do not restrict any movement of Squeakee Dino as this shortens battery life.

Movement is occurring, but it is not according to instructions:

- Place Squeakee Dino on a smooth and level surface.
- Turn switch from 'ON' to 'OFF,' then back 'ON' again.
- Manually moving/ tilting/ lifting Squeakee Dino may interfere with animations.

Squeakee Dino is not responding to the Headphones:

- Make sure you're placing the Headphones in the correct orientation – as illustrated in the 'Dance' section of this manual.