

BUBBLESHOOTING

delete a recorded message, press and hold the Talk button to record a new one.

Mini does not make sounds when I pet - ensure you're stroking the area specified in the "Petting" section of the instruction booklet.

you're not accidentally holding down the Talk button.

Mini does not repeat my entire message

ONLY the Squeakee Mini will record up to 4 seconds of sound. There are no significant pauses in what you say. Your Squeakee will think this is the end of your message and begin playback.

Speak closer to the microphone when recording.

Ensure you are in a quiet area with no loud background noise.

Mini is not responding to blowing

you blow close to the microphone.

mode, the following functions will be inactive:

Playback

Help the environment by disposing of your product and batteries responsibly. The wheeled bin symbol indicates that the product and batteries must not be disposed of in the domestic waste, as they contain substances which can be damaging to the environment and health. Please use designated collection points or recycling facilities when disposing of the item or batteries. More information can be found on: <http://www.recycle-more.co.uk>

www.recyclenow.com

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

5+

Squeakee
MINIS

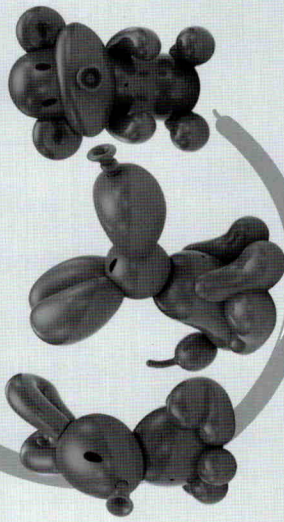

INSTRUCTION BOOKLET

WARNING: DO NOT PLAY SOUND CLOSE TO YOUR EAR!
CAUTION: ADULT SUPERVISION SHOULD BE ENCOURAGED FOR YOUNG CHILDREN. PLEASE REMOVE ALL PACKAGING ATTACHMENTS BEFORE GIVING THIS PRODUCT TO A CHILD.

IMPORTANT: DROPPING TOY MAY CAUSE DAMAGE THAT PREVENTS TOY FUNCTIONS. PLEASE RETAIN PACKAGING DETAILS FOR FUTURE REFERENCE SINCE THEY CONTAIN IMPORTANT INFORMATION. READ ALL INSTRUCTIONS CAREFULLY BEFORE USING PRODUCT. COLOURS AND CONTENTS MAY VARY. PRODUCT DOES NOT CONTAIN ACTUAL BALLOONS OR LATEX MATERIALS.

Please use discretion if making purchases for children younger than the age recommended on this package.



RECYCLING OUR PRODUCTS
All of our products are designed with easy recycling in mind. For information on the National Recycling Strategy and the Make-Use-Reduce-Recycle approach, visit www.recycling.gov.uk when you visit the website for UK recycling features.

Distributed by:
Chen Brook Ltd, Lees Road,
Leeds, LS10 2JG, UK
Customer Service Department
Tel No: 0161 633 9808
Made in Vietnam

www.character-online.co.uk

Item: Squeakes Mini, £1
SKU PK (3 Aged 6)
Item Number: 13301
Age Grades: 5 years plus



www.moosedays.com

© 2019 Moose.

WWW.SQUEAKEEPETS.COM


INCLUDES:
• 1 SQUEAKEE MINI - 1 INSTRUCTION BOOKLET



12302/12303/12304-TO-R0

WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.

YOUR SQUEAKEE MINI

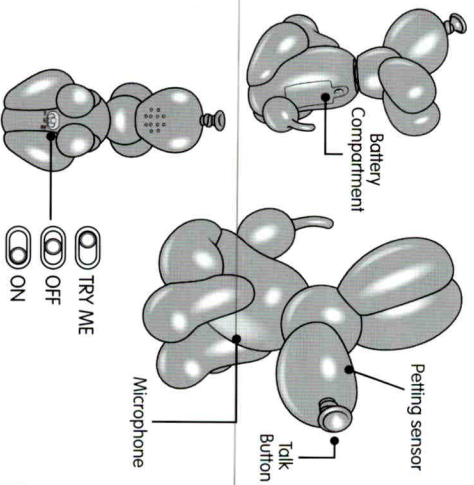

BATTERIES

3x BATTERIES INCLUDED FOR TRY-ME FEATURE. (Demonstration batteries included) Works best with fresh batteries. Replace with 3x button call AG13 (LR44) batteries. **Do not heat sweeper; not included; needed to replace batteries.**

- Alkaline batteries recommended.
- Always use the same or equivalent type as recommended; should be used interchangeably.
- Batteries are not for demonstration purposes only and may require replacing within a short period of time.
- Keep batteries out of the reach of children at all times.
- Never put button cell batteries in your mouth for any reason.
- Seek immediate medical attention if a battery is ingested.
- Always check to ensure the compartment lid is correctly sealed and secured before giving the toy to the child.
- Rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Exhausted batteries are only to be charged under adult supervision.
- The supply terminals are not to be short-circuited.
- Batteries are to be removed from the product before long-term storage.
- Batteries should be recycled or disposed of as per state and local guidelines.
- Use new batteries to obtain best performance.
- Different types of batteries or new and used batteries are not to be mixed.

WARNING This product contains a Button or Coin Cell Battery. A chemical burn in as little as two hours and lead to death. Dispose of used batteries immediately and safely. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, call your local Poison Information Hotline and seek immediate medical attention.

TALK BACK

Recording

- Press and hold the Talk Button then say your message (up to 4 seconds).
- Squeakee Mini will repeat your message back to you in a helium voice!

Playback

- To hear Squeakee Mini repeat your last recorded message, press the Talk Button quickly.

INFLATE

Blow on your Squeakee Mini to hear it inflate.

Inflate your Squeakee Mini 3 times, it will pop!